


Handleiding

Elektrische plisségordijnen


MOTOR CM-08

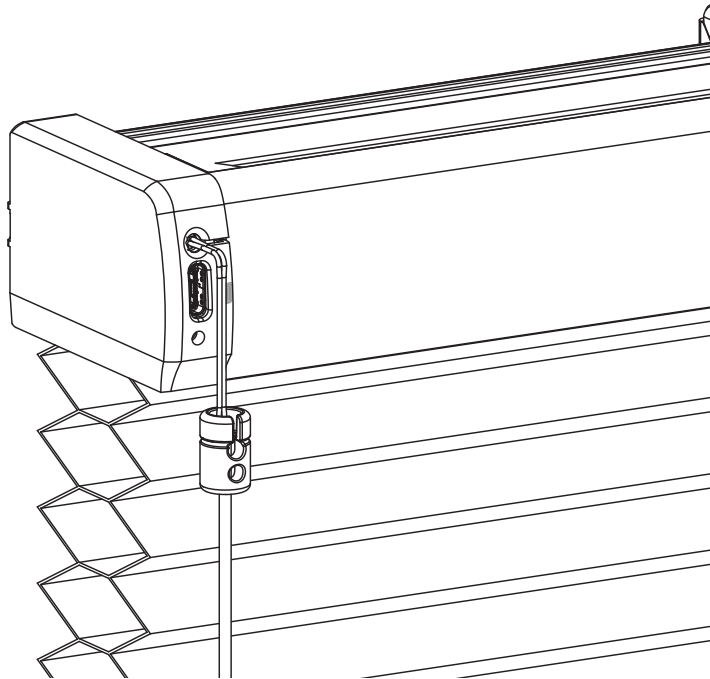

1 Pair a remote control

Any MOTION Blinds remote can be connected to your blind.

- 1 Select a channel on the remote and press the program button on the motor to activate program mode. The blind will start stepping up and down.

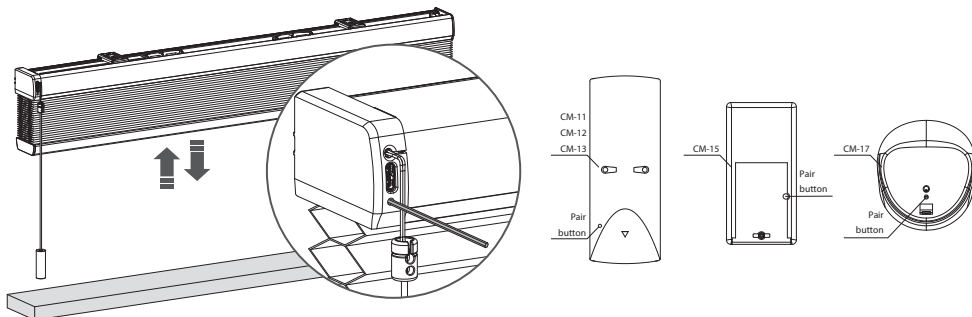


- 2 Press the pair button on the back of the remote control to pair the blind with the selected channel. The blind will shortly stop stepping, indicating that the remote has been paired to the blind.
- 3 Shortly press the program button to deactivate program mode. The blind stops stepping and can be operated.

2 Check rotational direction


WARNING: risk of damage. Stop the blind before reaching the end positions.

- 1 Shortly press the down button to check if the blind unrolls the right way. If the blind moves up, the rotational direction must be changed.
- 2 Simultaneously press the up and down button to change the rotational direction.

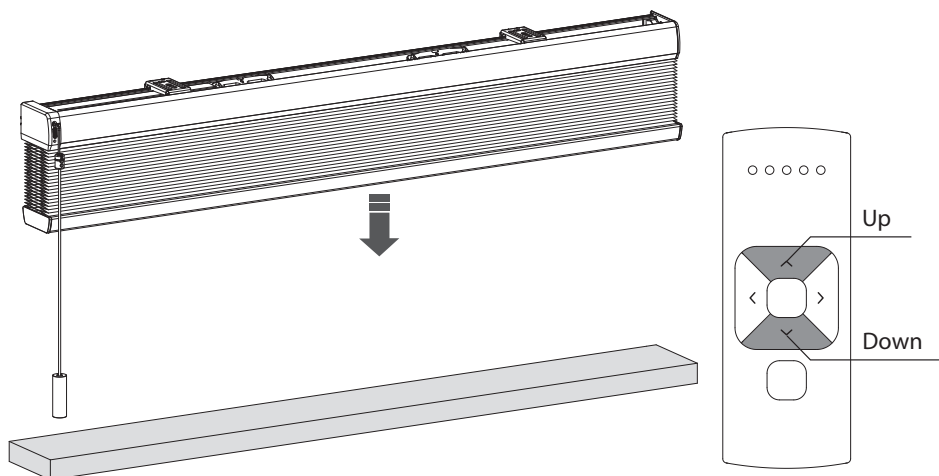


3 Set bottom position

Press and hold the down button until the blind reaches the desired bottom position. **WARNING:** risk of damage.
Slowly approach the bottom position.

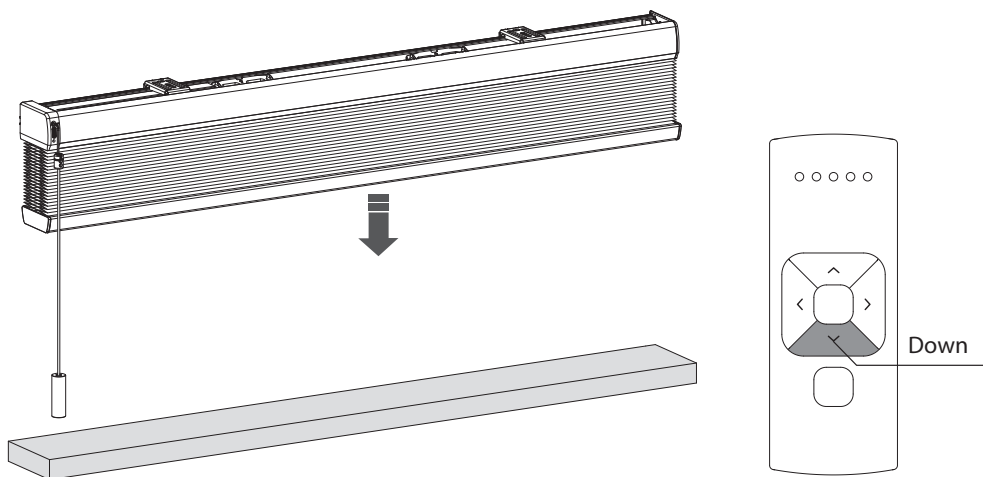

4 Save bottom position

Simultaneously hold the centre and the up button until the blind stops stepping and starts stepping again.
The bottom position has been saved.


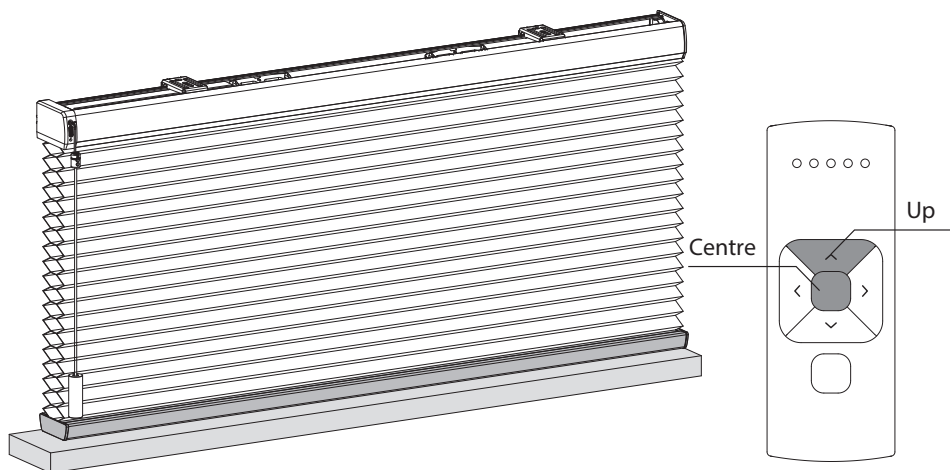


5 Set top position

Press and hold the up button until the blind reaches the desired bottom position.

WARNING: risk of damage.



Slowly approach the top position.

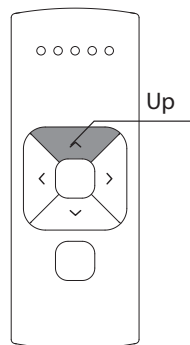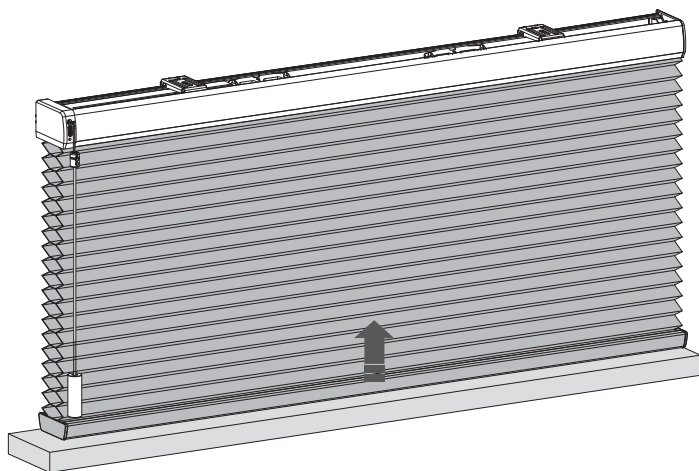

6 Save top position

Simultaneously hold the centre and the down button until the blind stops stepping and starts stepping again.


The top position has been saved.

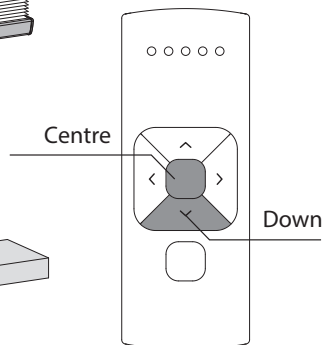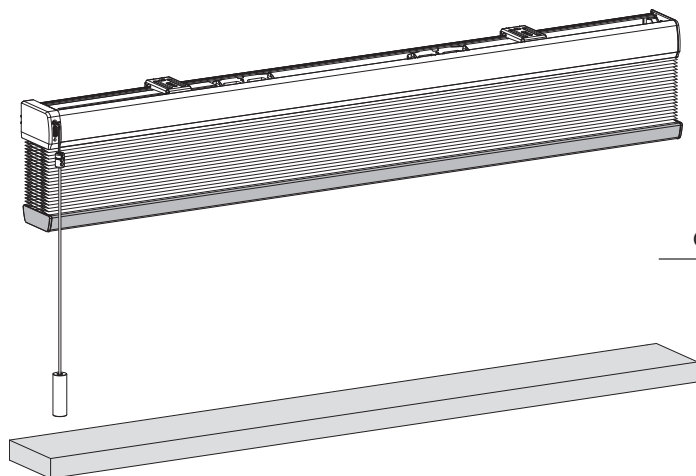

7 Set favorite position (optional)


1 Move the blind to a desired favourite position.

2 Hold the centre button to save this Favourite position. The blind shortly stops stepping indicating the favourite position has been saved.

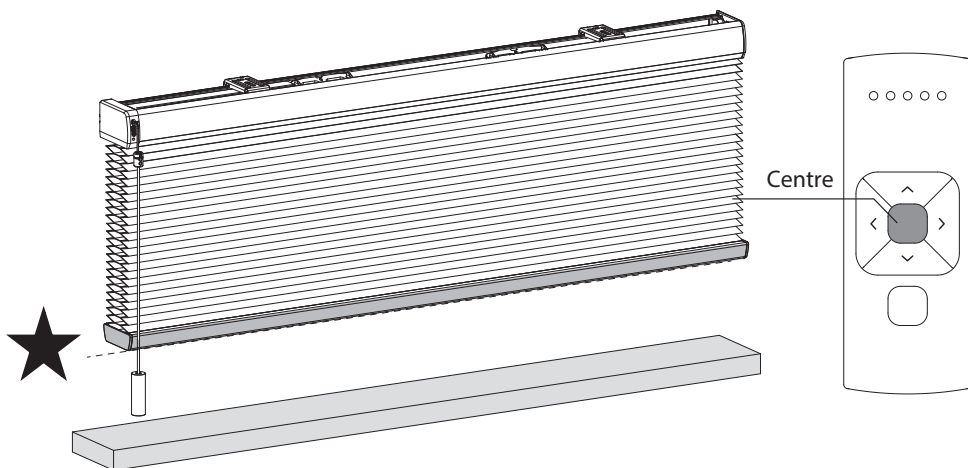

8 Deactivate program mode


Shortly press the program button to deactivate program mode. The blind stops stepping and can be operated.

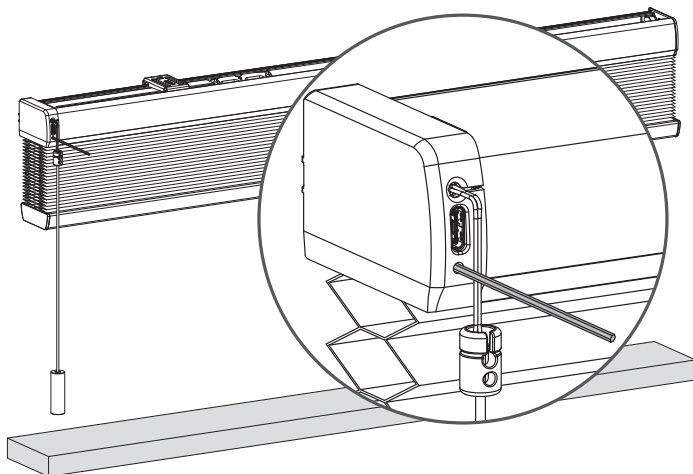

i Deactivate direct control for remote control


When pressing the up or down button on the remote control, the blind directly moves to its end positions (direct control). To operate the blind with smaller steps using the up and down button, direct control can be deactivated. Now, the blind only directly moves to its end positions when the up or down button is held longer than two seconds.

- .1** Press the program button on the motor to activate program mode. The blind starts stepping.
- .2** Hold the program button until the blind stops stepping (approximately 5 seconds) to deactivate or reactivate direct control.



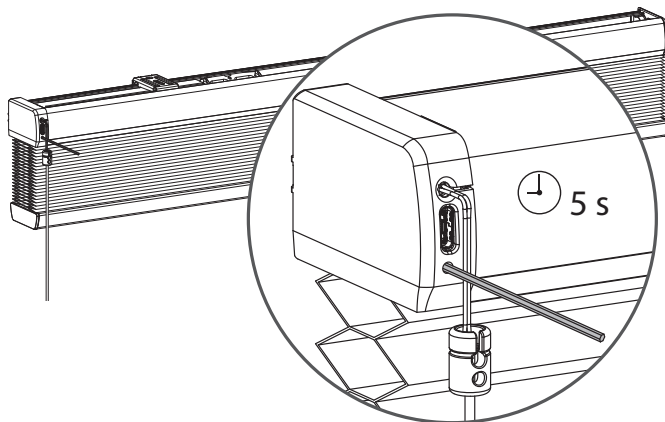


1 Top-down/bottom-up (bottom rail)

Top-down/bottom-up blinds are powered by two motors: one for the bottom rail and one for the middle rail. The motors need to be programmed individually: first the bottom rail motor and then the middle rail motor.

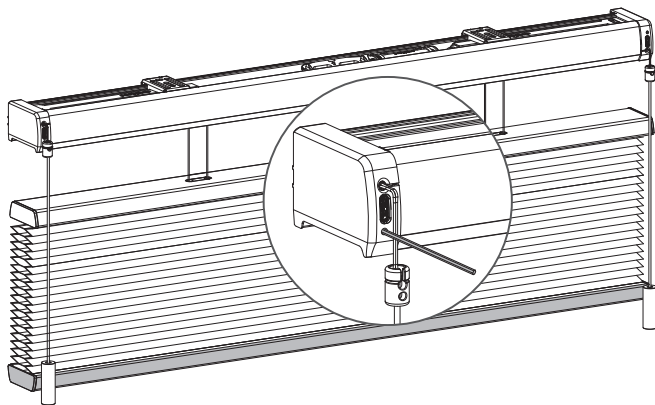


- .1 Pair the bottom rail motor to an empty channel on the remote. (see step 1)


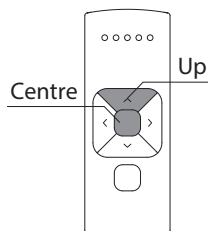
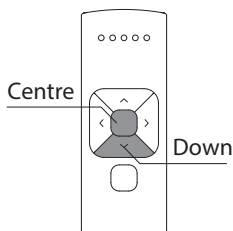
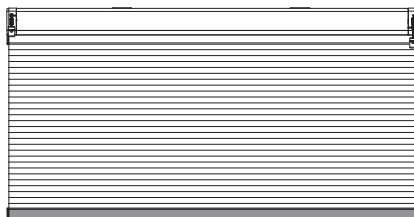


- .2 Check the direction of rotation of the bottom rail (see step 2) and move the bottom rail to the desired top position. Simultaneously hold the centre and the down button on the remote until the blind stops stepping and starts stepping again. The top position has been saved
- .3 Move the bottom rail to the desired bottom position. Program the bottom position of the bottom bar. Simultaneously hold the centre and the up button on the remote until the blind stops stepping and starts stepping again. The bottom position has been saved

2 Top-down/bottom-up (middle rail)

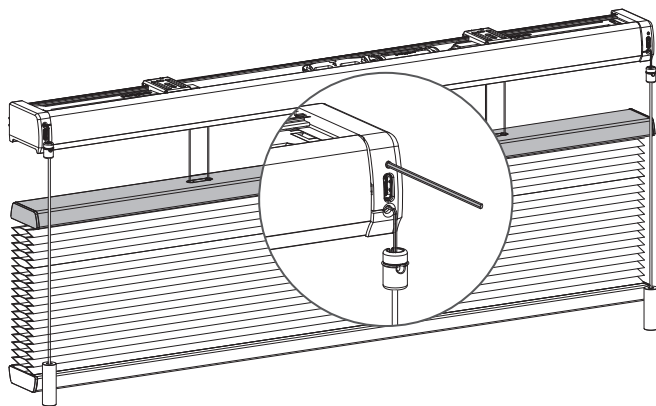

- .1 Pair the middle rail motor to an empty channel on the remote. (see step 1)

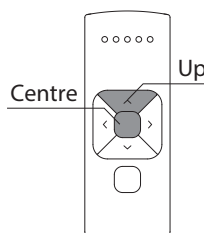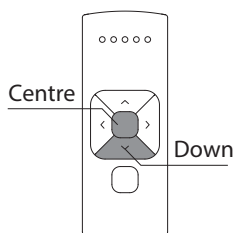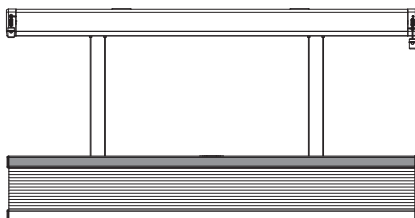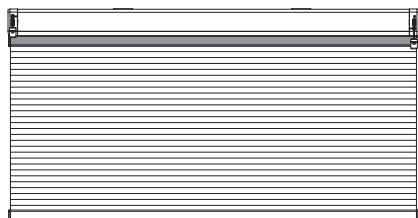


- .2 Check the direction of rotation of the middle rail (see step 2) and move the bottom rail to the desired top position. Simultaneously hold the centre and the down button on the remote until the blind stops stepping and starts stepping again. The top position has been saved
- .3 Move the middle rail to the desired bottom position. Program the bottom position of the bottom bar. Simultaneously hold the centre and the up button on the remote until the blind stops stepping and starts stepping again. The bottom position has been saved

i Activate / deactivate the motor (Transport mode)

To prevent the blind from getting damaged, the motor has a transport mode that makes sure the blind will not be activated before installation.

- .1** Hold the program button and pull twice to activate or deactivate the motor.

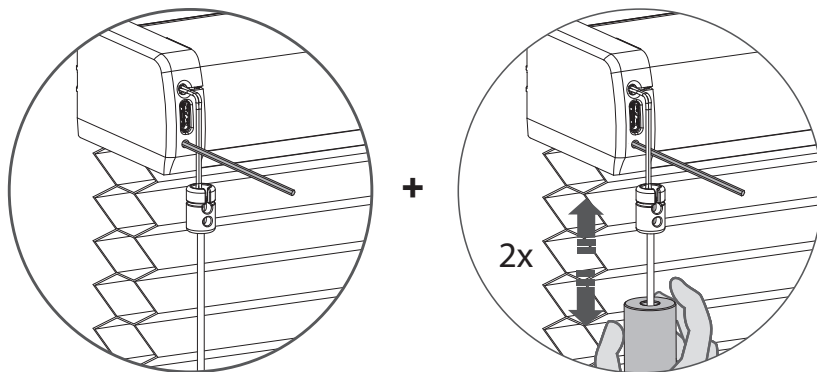

| Problem | Cause | Solution |
|---|---|--|
| Blind does not work. | Motor is in transport mode. | Activate the motor. See page 2/22. |
| | Motor battery is empty. | Charge the motor. See page 10. |
| | Remote battery is empty. (LEDs of remote are flashing rapidly.) | Replace the battery in the remote. See the manual of the remote. |
| | Remote battery is inserted incorrectly. | Replace the battery in the remote. See the manual of the remote. |
| | Radio-frequency interference | Make sure that the antenna of the motor is out of the way of metal objects. |
| | The distance from the phone/bridge/remote to the motor is too far. | Move closer to the motor. |
| | The remote is not connected to the blind. | Pair the remote with the motor. See page 9. |
| Motor LED flashes red. | The battery of the motor is empty. | Charge the motor. See page 10. |
| Blind is not charging. | Charger is not plugged in or does not work. | Try a different charger or make sure the charger is plugged in the outlet. |
| Multiple blinds respond to a remote. (Unable to program a single blind) | Multiple blinds are paired with a single channel. | Pair the blind with a free channel to program or use single select to program the blind. |
| Blind moves in small steps. | 1) No end limits are programmed. 2) Direct control is deactivated. | 1) Program end limits. See page 7, 15-16. 2) Activate direct control. See page 18. |
| Favourite position can not be programmed. | No end limits are programmed. | Program end limits. See page 7, 14-15, 23-24. |
| Blind lowers too far. | End limits are programmed incorrectly. | Reprogram end limits. See step 7, 15-16. |
| Blind moves in the opposite direction. | The rotational direction has been set incorrectly. | Change the rotational direction. See page 14. |
| The blind keeps moving up and down. | The blind is in program mode. | Press the program button on the motor to exit program mode. |
| The blind firmware will not update to the latest version. | The blinds bluetooth connection is not stable. | 1) Close the app and reconnect with your motor. 2) De-activate the motor and re-activate the motor and try to update again. See page 22 |